

Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

- Do not disassemble or throw into fire or water.
- Do not expose to extreme weather conditions.
- Do not use this product if you observe visible defects.
- Do not short circuit the product or store it in a receptacle where it may be short circuited by other metallic or conductive objects.
- Do not operate the product if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury.
- Never attempt to dismantle the unit.
- Children should be supervised to ensure that they do not play with the product.
- Always disconnect the device when not in use.
- Do not use if broken, damaged, or exposed to liquids.
- Not to be used in extremely high ambient temperatures.
- Do not use with damaged or faulty accessories.
- Do not place near any sources of heat, open flame, or liquid.
- The Wall Charger is for indoor use only, the maximum ambient temperature is 25oC.

CAUTION: The ChargePuck uses inductive charging, do not place metallic objects such as coins, keys, metallic cases or metal foil on top of the charging pad.



Warranty

Cygnett guarantees to the end use of this product that it is free from defects in material and workmanship – and that if used in accordance with any accompanying labels or instructions, it will perform as specified. This warranty does not cover loss, theft, damages caused by accident, misuse, modification, or normal wear and tear. You are also entitled to have the product repaired or replaced if the product fail to be of acceptable quality and the failure does not amount to a major failure. This warranty is governed by the laws the country in which you purchased your Cygnett product. The product must have been purchased through an authorized dealer. Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Cygnett takes no responsibility for damages caused by incorrect use of its products.


Cygnett and the Cygnett logo are trademarks of Cygnett Pty Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Made in China.

Cygnett Pty Ltd 858 Lorimer St, Port Melbourne, Victoria 3207 Australia
Cygnett EU Authorised Representative 24hour-AR
Van Nelleweg 1, 3044 BC Rotterdam, The Netherlands
compliance@24hour-ar.com
Cygnett USA Inc 3838 W Carson St, Ste 220, Torrance, CA 90503
Cygnett UK Ltd 71-75 Shelton St, London, WC2H 9JQ
Cygnett NZ Ltd Level 9, 45 Queen Street, Auckland 1010

CYGNETT®

**ChargePuck Qi2.0
15W Wireless Charger**

User Manual

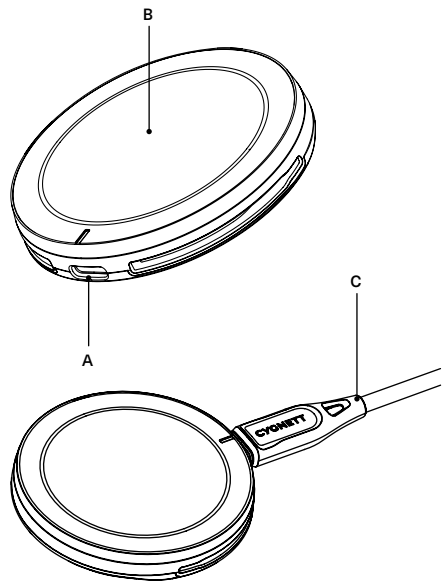

- A USB-C Input
- B ChargePuck Qi2.0 15W Charger
- C USB-C to USB-C Cable

Charge Your Device Wirelessly

Connect the included USB-C cable into your USB-C wall charger, and the other end to the USB-C input (A). Place your wireless charging device on the Wireless Charging Pad (B), aligning to the centre of the wireless charging pad. Your device should begin to wirelessly charge.

To achieve fast charging, ensure the wireless charge base is connected to a 20W output. For optimum charge speed, adjust your device so that it is aligned to the centre of the wireless charging pad. Ensure any case on your device is not affecting the wireless charging. If required remove the case, as some cases may interfere with wireless charging if they contain metallic material or are overly thick.

Product Specifications

Name	ChargePuck Qi2.0 15W Wireless Charger
Item Number	CY5061CCRGP CY5062CCRGP
USB-C Input	5.0V=3.0A (15.0W), 9.0V=2.22A (20.0W)
Wireless Output 1	15.0W
Total Output	15.0W Max