

- Do not place near any sources of heat, open flame, or liquid.
- Disposal of a battery into fire or a hot oven, mechanically crushing or cutting of a battery, may result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment, such as direct sunlight, fire, or a hot surface may result in an explosion or the leakage of flammable liquid or gas
- The power bank will generate heat when charging. Always charge in a well-ventilated area away from direct sunlight. Do not charge under pillows, blankets or on flammable surfaces.
- Do not subject the power bank to mechanical shock such as crushing, bending, puncturing or shredding. Avoid dropping or placing heavy objects on the power bank.
- Do not store the power bank without power to prevent the battery from being deeply over discharged, which may cause the battery bulge.
- Keep the power bank away from heat sources, direct sunlight, combustible gas, humidity, water, or other liquids.
- A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.
- Operating temperature should be between 10°C to 45°C.
- Storage and transportation ambient temperature: 10°C to 45°C.
- There is a risk of fire or explosion if the battery is replaced with an incorrect type.

- Replacement of a battery with an incorrect type may defeat a safeguard
- Do not operate at an altitude higher than 13,000m (air pressure not less than 70kPa).
- Do not place close to a magnetic strip or strip card as it could cause magnetic failure.
- Please keep charger a safe distance of at least 80cm from any implantable medical devices to avoid medical device interference.
- In the case of the device overheating, place disconnect immediately.

**Complies with
IMDA Standards
DA106100**



This symbol on the product indicates that this product shall not be treated as household waste. Instead it shall be sent to the applicable collection point for the recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. For more information about the recycling of this product, please contact your local city office.

Cygnett and the Cygnett logo are trademarks of Cygnett Pty Ltd. Other brands and product names are trademarks or registered trademarks of their respective holders. Made in China.

Cygnett Pty Ltd
858 Lorimer Street, Port Melbourne,
Victoria, 3207, Australia

Cygnett USA Inc
3838 W Carson St, Ste 220, Torrance,
CA 90503

Cygnett NZ Ltd
Level 9, 45 Queen Street, Auckland 1010


Cygnett UK Ltd
71-75 Shelton St, London,
WC2H 9JQ

Cygnett EU Authorised Representative
24hour-AR
Van Nelleweg 1, 3044 BC Rotterdam,
The Netherlands
compliance@24hour-ar.com

CYGNETT®

MagSlim Magnetic Wireless Power Bank 10K

User Manual

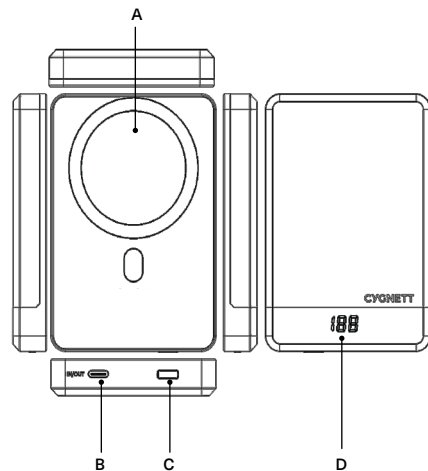

- A Wireless Output
- B USB-C Input/Output
- C Power Button
- D LED Display

Charge Your Device

Charge your device by 1. Connecting your device to a compatible cable and plug into the USB-C port (B) to activate charging. Or 2. Snap MagSlim Magnetic Wireless Power Bank 10K to wireless charging compatible devices like iPhone 15/16 Pro to start wireless charging. Once wireless charging activated, the LED display (D) charging icon will light up. To check the remaining power on your power bank, press the power button (C) once. The LED display (D) will show the remaining power.

Recharge Your Power Bank

To recharge your power bank, use the included USB-C to USB-C cable, and plug one connector to USB-C port (B) on Power Bank and the other connector to compatible wall charger with USB-C port.

After using the product's power, charge it at least 30% before turning off to ensure optimum battery life.

Total power output is the measured in Watts and is the maximum output that the power bank/wall charger can safely provide when all the USB ports are in use. This is different from an individual ports maximum output (which is higher than the total power output).

Product Specifications

Name	MagSlim Magnetic Wireless Power Bank 10K
Item Number	CY5278PBCHE, CY5279PBCHE
Battery Capacity	10,000mAh/38.9Wh
USB-C Output	5.0V=3.0A (15.0W), 9.0V=2.22A (20W)
Wireless Output	5W, 7.5W, 10W
USB-C Input	5.0V=3.0A (15.0W), 9.0V=2.0A (18.0W)
Total Output	5V/3A (15W Max)
Working Frequency Band	110~205KHZ

After evaluation, the product satisfied with RED Directive RF exposure required while used 20cm away from the human body.

Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

- Do not disassemble or throw into fire or water.
- Do not microwave, incinerate, paint, or insert foreign objects into the power bank.
- Do not expose to extreme weather conditions.
- Do not use this product if you observe visible defects.
- Do not short circuit the product or store it in a receptacle where it may be short circuited by other metallic or conductive objects.
- Do not operate the product if it has been wet or otherwise damaged, to prevent against electric shock, explosion and/or injury.
- Never attempt to dismantle the unit.
- Children should be supervised to ensure that they do not play with the product.
- Do not leave product/device unattended (e.g., leaving in the car).
- Always disconnect the device when not in use.
- Do not leave the power bank (on charge or charging a device) unattended.
- Do not use if broken, damaged, or exposed to liquids.
- Not to be used in extremely high ambient temperatures.
- Do not use with damaged or faulty accessories.