Caution

Please read all warnings for your safety and optimal user experience. Please read and follow these instructions carefully and retain for your records.

- 1. Always disconnect the device when not in use.
- Do not use if broken or damaged, or if exposed to liquid.
- 3. Not to be used where the ambient temperature exceeds 40°C/105°F
- 4. Do not use with damaged or faulty cables/accessories.
- 5. This product is intended for use with smartphones and tablets.
- 6. Do not place near any sources of heat, open flame, liquid.
- Do not use with power extension cords, use only in wall socket.
- 8. Designed for indoor use only.
- 9. Use a dry cloth to clean the product
- 10. There should be clear space around the product, not touching other material to avoid overheating.



This symbol on the product indicates that this product shall not be treated as household waste. Instead it shall be sent to the applicable collection point for the recycling of electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health. For more information about the recycling of this product, please contact your local city office

Complies with

DA104966

Cygnett is a trademark of Cygnett Pty Ltd. Made in China.

Cygnett Pty Ltd

858 Lorimer Street, Port Melbourne, Victoria, 3207, Australia

Cygnett USA Inc

3838 W Carson St, Ste 220, Torrance, CA 90503

Cygnett UK Limited

71-75 Shelton St, London, WC2H 9JQ

Cygnett EU Authorised Representative 24hour-AR

Van Nelleweg 1, 3044 BC Rotterdam, The Netherlands compliance@24hour-ar.com

CYGNETT

MAGDESK 2-IN-1 MAGNETIC WIRELESS CHARGER

USER MANUAL



- A USB-C input
- Magnetic wireless output 1
- C Wireless output 2
- D Indicator light

Attaching the Ring

For devices other than iPhone 12 series and above, apply the metal attachment ring to the outside of your phone case using the included applicator guide. Metal attachment ring is to be applied directly on the outside of phone cases only.

- Place the guide over the back of your phone case. Align your phone case vertically so that each edge matches the same number on both sides.
- Align your phone case horizontally so that each edge matches the same letter on both sides.
- If there are no obstructions, peel the protective layer from the metal attachment ring, and apply them to your phone case using the applicator guide.

Charge Your Device Wirelessly

Connect the included USB-C cable to the included wall charger, and the other end to the USB-C input (A). Place your wireless charging device on the magnetic wireless output (B). Your device should begin to wirelessly charge.

To achieve fast charging, ensure you are using a charger that is capable of fast charging. Some cases may interfere with wireless charging if they contain metallic material or are overly thick.

Charge your AirPods

Place your AirPods wireless charging case on the wireless output 2 (C). Your AirPods should begin to wirelessly charge. See below for indicator light (D) statuses for the wireless output 2 (C).

Indicator Light	Status
Solid blue	Powered and on standby
Breathing red	Wirelessly charging
Flashing blue and red	Foreign object on wireless output

Product Specifications

Name	MagDesk 2-in-1 Wireless Charger (UK)
Item Number	CY3772ACOCP
	5.0V=3.0A (15.0W)
USB-C Input	9.0V=3.0A (27.0W)
	12.0V=3.0A (36.0W)
Wireless Output 1	5.0W, 7.5W, 10.0W, 15.0W
Wireless Output 2	5.OW
Total Output	20.0W Max
Max Output Power	-0.9dBµA/m@10m
Working Frequency Band	100 kHz - 300 kHz

After evaluation, the product satisfied with RED Directive RF exposure required while used 20cm away from the human body.